



# Globe-Arc Welding Helmet

## A hybrid design of flip up welding and cutting helmet

The Globe-Arc is the latest design in flip up welding and grinding helmets. The visor provides effective protection from UV and IR radiation when visor is open and closed, and is available in different shade levels.



### Features

The new hybrid shell follows the ESAB family design. Made from an extremely strong Zytel material, the shell offers a full head and face protection, whilst being very lightweight

The compact design allows for welding in very tight places, whilst reducing the visible light entering the back of the helmet, caused by other welding light

The new Flip Visor has a upper retention stop, which eliminates the visor dropping down when welding or grinding

The visor also has Shake Proof ¼ turn retainers, which allows for quick removal and replacement of visors

The Globe-Arc is suitable for all welding applications because of the availability to choose from different visor shades.

The helmet has a very wide field of vision both on the large main visor and flip up visor. > Providing increased work safety

The visor has a flat top brow for easy put downs, and prevents the visor from scratching.

The helmet is fitted with the new ESAB Comfort Headgear. Constructed from quality Nylon, with a large adjustment ratchet, and comfort sweat band

### Ordering Information

Globe-Arc shade 10	0700 000 947
Globe-Arc shade 11	0700 000 943
Globe Arc 10 prepared for Air	0700 000 935
Globe Arc 11 prepared for Air	0700 000 936

### Main Visor

1.8mm Thick

Available in : clear, UVIR 2, UVIR 3 & UVIR 5

B Impact Rating EN 166 – Approved for Grinding

Allows visible light to go through when welding, but blocks harmful UV-radiation (No Red-Eye Effect). Helmet can be used for heavy-duty welding with high amps

### Moulded Flip Welding Visor

Available in: UVIR 5, UVIR 8 & UVIR 10


### Globe Arc Prepared for Air

The Globe Arc can be used in combination with the Origo Air respiratory unit. The helmet is delivered fully assembled and includes Flame resistant head and face seal and air duct.



## Spare Parts

2 Large Inner Visor Globe-Arc Clear	0700 000 238
2 Large Inner Visor Globe-Arc DIN 2	0700 000 239
2 Large Inner Visor Globe-Arc DIN 3	0700 000 240
2 Large Inner Visor Globe-Arc DIN 5	0700 000 241
3 Outer Flip Visor Globe-Arc DIN 5	0700 000 242
3 Outer Flip Visor Globe-Arc DIN 8	0700 000 247
3 Outer Flip Visor Globe-Arc DIN10	0700 000 248
4 Flip Up Globe-Arc Holder	0700 000 249
5 Head Gear Globe-Arc	0700 000 250
6 Sweat Band Head Gear Pro	0700 000 244
•Face Seal	0700 000 952
•Head Seal	0700 000 951

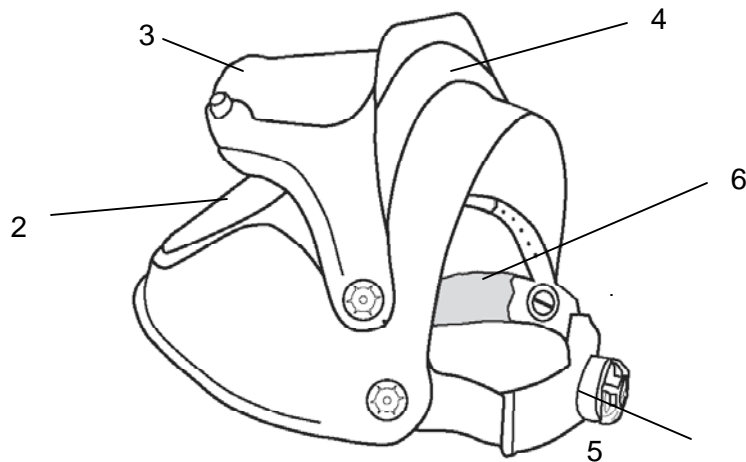

### Unrivalled service and support

Our commitment and ability to deliver the expected service and support starts immediately after the order is confirmed. We endeavour to offer our customers an After Sales service, which is second to none. A strong and skilful service organisation is prepared to offer service and maintenance, calibration, validation and upgrading of equipment and software.

The service organisation will offer standardised solutions for the reconditioning or modification of existing products.

Spare and wear parts are manufactured according to ESAB's quality plan. Exchange Printed Circuit Board (PCB), exchange modules and components are available for all our products in order to reduce downtime to an absolute minimum. ESAB is continuously upgrading authorised service partners for local service support. Customers who have their own service and maintenance personnel will always be offered a service-training package as part of a total ESAB offering. However, product and process training for end-users will form an additional part of the ESAB offering. Always ask your ESAB sales representative or distributor for a complete ESAB solution.

Quality accessories for the quality welder  
ESAB offers a wide range of accessories. The complete range, along with product information, is available at our local web-sites, look at [www.esab.com](http://www.esab.com) or contact your local ESAB dealer.



**ESAB Sverige AB**  
Box 8004  
402 77 GÖTEBORG  
Tel. 031 50 95 00  
Fax 031 50 92 22  
[www.esab.se](http://www.esab.se)

